



SMART PROTECTION

WEBCAM-COVER.EU

WEBCAM COVER INSTRUCTION MANUAL

1. Before use, the surface must be cleaned.
2. Remove the backside 3M protective film from the product.
Be careful not to touch the adhesive.
3. Place the product in front of the camera. Make sure it is precisely fitted.
Gently press the webcam cover to the device.
Total drying time is 24 hours.
4. Pull the sliding disk away to hide or to reveal the camera.
5. **A suggestion for product placement:**
 - WS-C01: Telephones, because of its small size, high adhesion to the surface and its edge-protective design. These characteristics help in creating the stability of the magnetic disk, so it can be used under more demanding operating conditions.
 - WS-C02: Notebooks, tablets, all in one PCs, because of its large size and thin design.
 - WS-C03: Notebooks, tablets, television cameras.
6. **Recommendations for use in case of telephones:**

The sliding disk of the WS-C01 webcam cover is magnetic, so do not place the telephone next to keys or other metal objects, as the magnet may stick to it, and the sliding disk can be easily lost.
7. **SAFETY:** ATTENTION, keep it away from small children to prevent them from suffocating!
Smaller parts may be swallowed by children!
8. **Videos:** at kameratakaro.hu, in the Webshop's Video option, you can watch videos about installing, cleaning and operating the product, if needed.

In case of a failure covered by warranty, please contact us via e-mail or telephone. Repair under warranty or replacement is possible only by presenting the original receipt!